

FICHA TÉCNICA

CÓDIGO ARTÍCULO	DENOMINACIÓN	FABRICADO CONFORME NORMA
36044	Carretilla 712R 4R	EN 748 (AENOR)

Carretilla marca campos de pintura ecológica (se disuelve-rebaja con agua marcaje de mantenimiento), indicada para campos de hierba natural.

Rígida estructura de acero con amplio manillar para que el marcado se realizada de forma rápida, ágil y fácil.

La boquilla difusora de pintura se encuentra en la parte delantera de la carretilla, lo que permite un óptimo marcado de áreas problemáticas como por ejemplo las de los postes, permite sustituir la boquilla manualmente sin herramienta de forma fácil, y rápida.

Permite ajustar el ancho de la línea de 80 a 120 mm.

El transporte se realizada mediante cuatro ruedas neumáticas, lo que permite una mejor guía, dejando la línea entre las ruedas especialmente importante a la hora de marcar el círculo central.



Deposito a presión con gran capacidad para 12 l, con bomba manual para iniciar la presión 2.5bar y válvula de seguridad.

FICHA TÉCNICA

VALBULA DE SEGURIDAD




**ENCHUFE RAPIDO
PARA UNA LIMPIEZA DEL TANQUE RAPIDA**



SISTEMA DE BOQUILLA CON MANDO EN MANILLAR BOQUILLA METALICA GRAN RENDIMIENTO



FICHA TÉCNICA

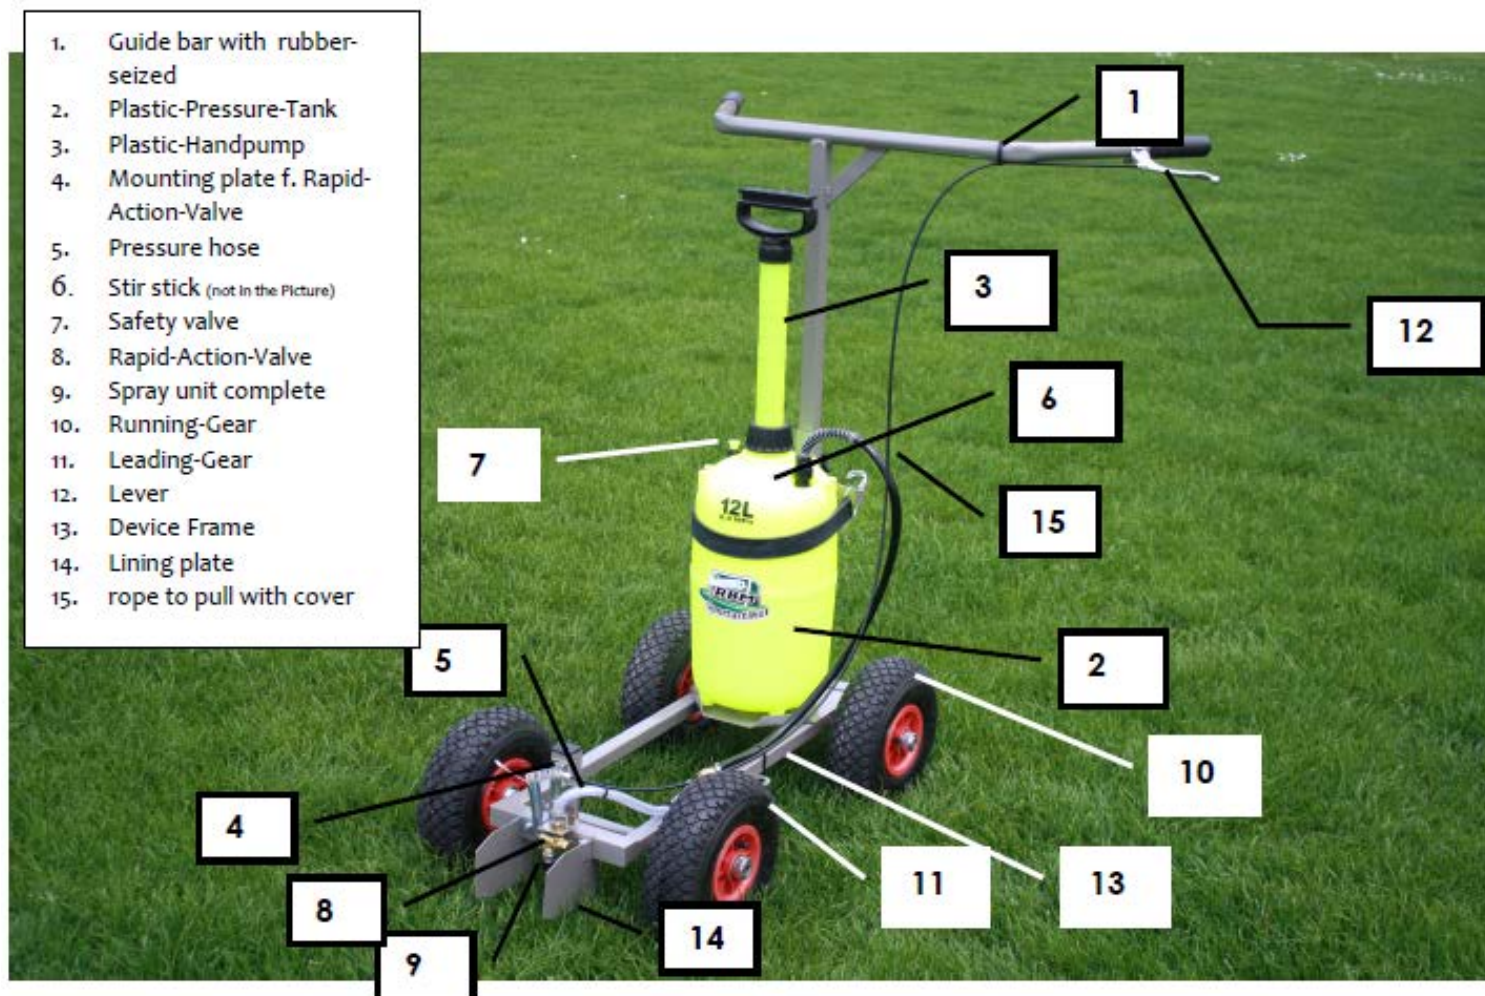

Exploded View


R16	Kunststoff-Behälter
R05	Kunststoff-Handpumpe, komplett
R22	O-Ring, Ø 28x4 mm
R15	Pumpenmutter
R14	O-Ring, Ø 38x5 mm
R24	Ventilteller der Pumpe (Gummi)
M08	Rührhaken (nicht im Bild)
R03d	Sicherheitsventil
R17	Stutzendichtung 22x16x2
R82c	Stutzen
R81e	Schlauchtülle
R80e	Schlauchmutter
R47	O-Ring Ø103 x 2,4 mm
R113	Mutter

Safety Valve R03d

After the initial inflation of the container (about 5-10 movement of the pump) pull it valve handle - the valve lets the air out. After releasing the handle, the valve should not drain air. Check that the nut of the safety valve R03d is firmly screwed.



Hinweis:

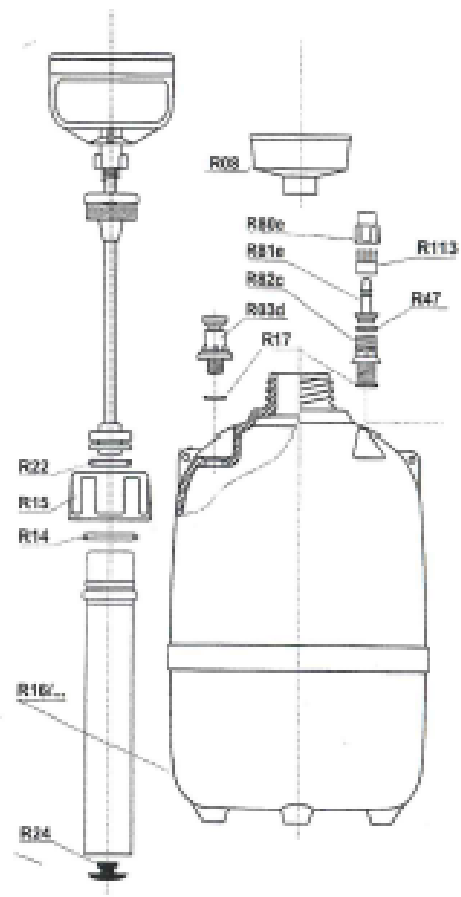

Maintenance of sprayers:

- Check if the pump works easily. In resistance, remove the pump, unscrew the pump piston, the seals and the cylinder grease with silicone grease. Check whether the safety valve is working. In resistance, the mother of the safety valve, unscrew, remove the valve core, clean, lightly greased with silicone grease. Composed cons, screw the valve nut

Troubleshooting:

Spray unevenly: nozzle end dirty → Clean

Air is in the hose
or spraying is interrupted: Intake manifold to tank is not seated firmly in the hose

Pressure is missing: Pump plate is dirty → Clean
Sealing of the pump piston is worn → Replace
Silicone grease in the pump is missing → Grease